

SPEED / DISABLED HARNESS

Speed Harness Assembly Instruction

1. Remove the seat belt at the 14mm mounting bolts (Note: unscrew the nut but leave the bolt in place)



2. Lay the new lap belt (the padded belt) over the seat (Disabled harness crotch strap part removed) and put the shoulder straps over the seat backrest with the triangle hole between the straps over the pulley whip socket.





3. Attach the new lap belt with the 14mm mounting bolts in the same position as the standard seat belt – but do not tighten the nut yet.








4. With the remaining strap, go down and around the back of the chassis (from back to front) with the anchor tang onto the seat belt bolt (on top of the lap belt tang). Now tighten the bolt.




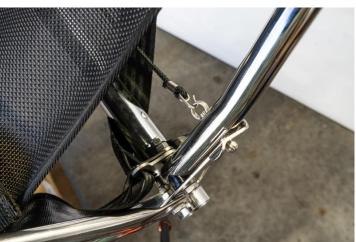

Disabled Harness Crotch Strap Fitting Instruction

1. With the Harness seatbelt and shoulder straps fitted, unlatch the seat belt and fit the crotch strap loop over the seat belt tang.




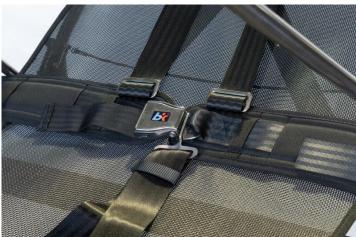





2. Attach the clip on the end of the crotch strap to the shoulder strap anchor tang

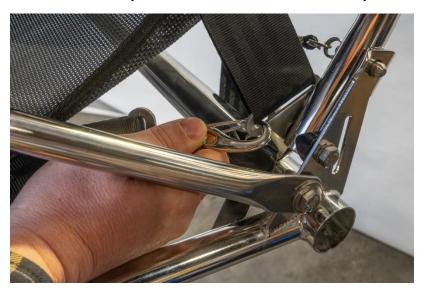

Adjusting the Harness

- Attach the waist belt and adjust as normal (refer to kart instructions if necessary)
- Adjust each shoulder strap using the ladderlock and lock into place by threading the strap back through the ladderlock as pictured below.
- The crotch strap is also adjusted with the ladder locks.





